

INSPIRATION POINT AV GUIDE

1. Locate the main power box in the room left of main window. Flip switch to turn ON main power box. When not in use, main power should be turned OFF.

 Locate handheld and lapel microphones.*
They are typically found in black bags on the podium. Each bag contains extra batteries.

*Note: Inspiration Point should have 1 lapel and 2 handheld microphones. INSPIRATION POINT AV GUIDE PAGE 1 OF 4



IIPNATEN 8/11



FOR AFTER-HOURS EMERGENCIES, CALL (775) 588-6759 OPT. 8

 Turn handheld microphones ON by holding the red power button located under the base.
To turn ON the lapel microphone, open the battery compartment and hold the black ON/OFF button.

4. Microphones should be operational at this point. Adjust the volume through the main power in Step 1.

5. Turn OFF microphone by holding the power button when finished.

*Note: Microphone receivers are located below the main power box in Step 1. There should not be a need to modify these.







FOR AFTER-HOURS EMERGENCIES, CALL (775) 588-6759 OPT. 8

INSPIRATION POINT AV GUIDE

PAGE 2 OF 4

A. If your group wants to use the Smart TV, there are two ways to connect. First, plug the TV in and locate the black bag with two remotes inside.

B. Turn the TV on with the remote. Connect yourdevice through the HDMI cable located at the backof the TV OR connect your device throughBluetooth. The name of the TV is Inspiration Point.

C. If your group wants to use the Bose Sound Bar below the TV, turn it on using the other remote. The Sound Bar is already wired to the TV, but you can also connect it through Bluetooth if desired.

D. If your device has the capability, it is also possible to "Cast" video onto the Smart TV. Find this option in your device's Display menu.









TV Remote

FOR AFTER-HOURS EMERGENCIES, CALL (775) 588-6759 OPT. 8

INSPIRATION POINT AV GUIDE

PAGE 3 OF 4

 You have the option to plug other lines into a wall jack that connects to the room speakers.
The "whirlwind" plate can be located at the front of the room.

 2. Extension cords for the Mic Input are located in the room to the right of the entrance.
Otherwise, plug your own cords into the white L
IN and Red R IN. Volume is located at the bottom of the plate.

3. This should automatically connect to the Inspiration Point Speakers.



INSPIRATION POINT AV GUIDE

FOR AFTER-HOURS EMERGENCIES, CALL (775) 588-6759 OPT. 8